



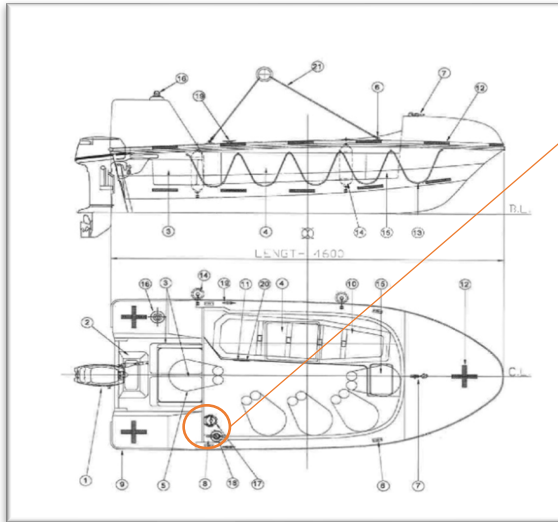

Boat type: VOX46M

Compass:
PLASTIMO OFFSHORE105 /135


INCORRECT: Plastimo logo and lubber line (red) face the **BOW**

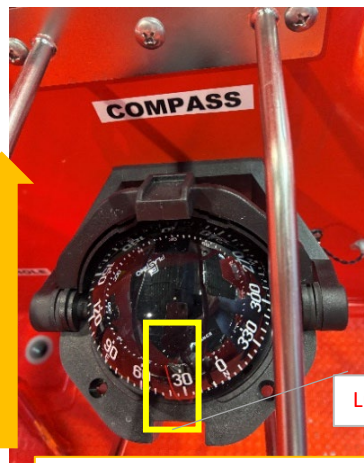

Lubber line (red)

Cover opens FWD → AFT

CORRECT: Plastimo logo and lubber line (red) face the **STERN**

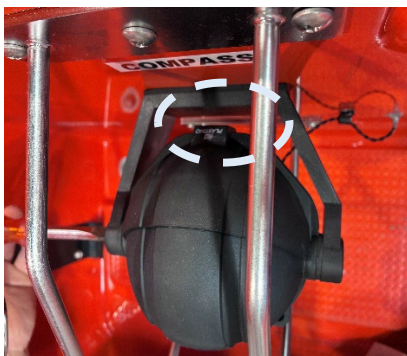


Cover opens AFT → FWD



<Procedure>

1. Loosen both side screws by hand, then remove them with a flat-head screwdriver.

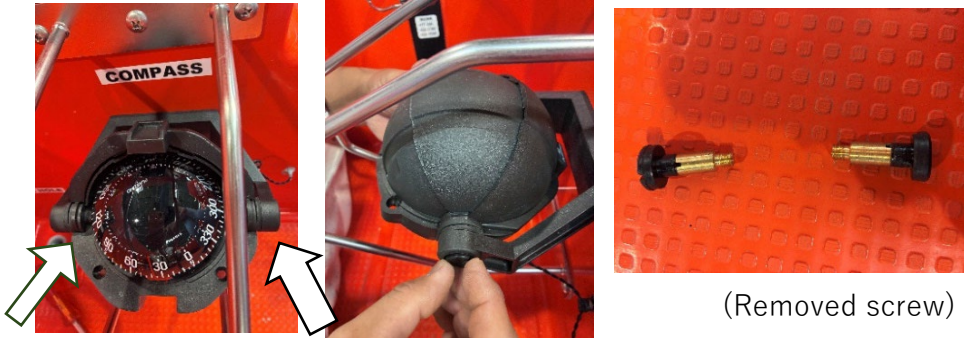

-
2. Turn the compass 180° , refit it, and tighten the screws with a flat-head screwdriver.

- Cover opens from stern to bow (Plastimo logo faces the stern).
- Lubber line (red) points to the stern.



-
3. In case of excessive tension on the compass cable, cut the silicone edge at ★ (see below).

- Cut the silicone edge at ★ in the fuel tank space to free 2–3 cm of cable.
- Reapply silicone at ★.



4. Checks after installation

- ☐ Lubber line (red) on the compass points to the stern.
- ☐ Compass cover opens from aft to forward.

END